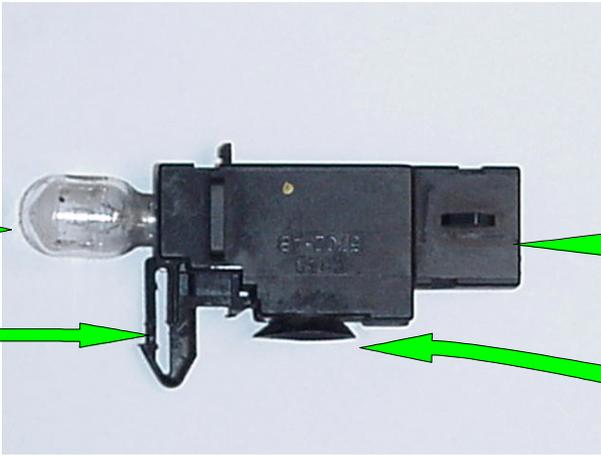
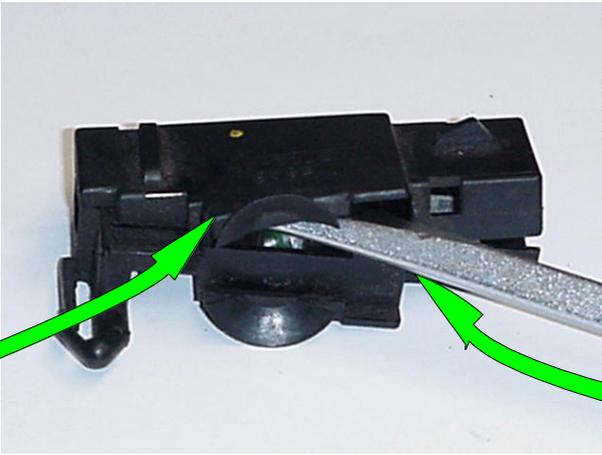
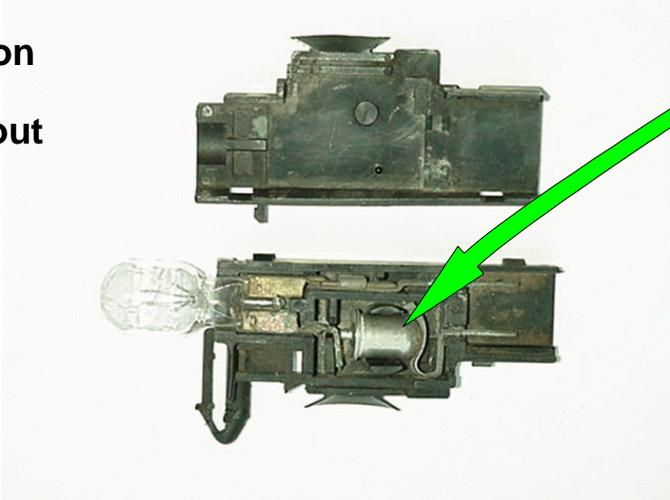


Removal and Replacement of Mercury Switch in Ford Hood and Trunk Lighting Assembly

- 
1. Remove wiring clip from back of assembly by sliding a screwdriver under clip and sliding clip back
2. Remove bulb
3. Compress front two-part arrow shaped leg near bulb with screwdriver and pull out of mounting hole.
4. Slide the slotted center mounting assembly off plastic brace
- 
5. Slide screwdriver between two-part case at rear of assembly to open rear latch
6. Move screwdriver to position shown and apply upward motion to pop front latching leg out
- 
7. Use screwdriver to pry out mercury switch
8. Place ball-bearing switch in position with same orientation
9. Snap the two-piece casing together
10. Put the assembly back in place by reversing steps 4,3,1 and 2